 


for LIVING TM
_{MC}

Octagon Gazebo

Product No. 088-1613-8

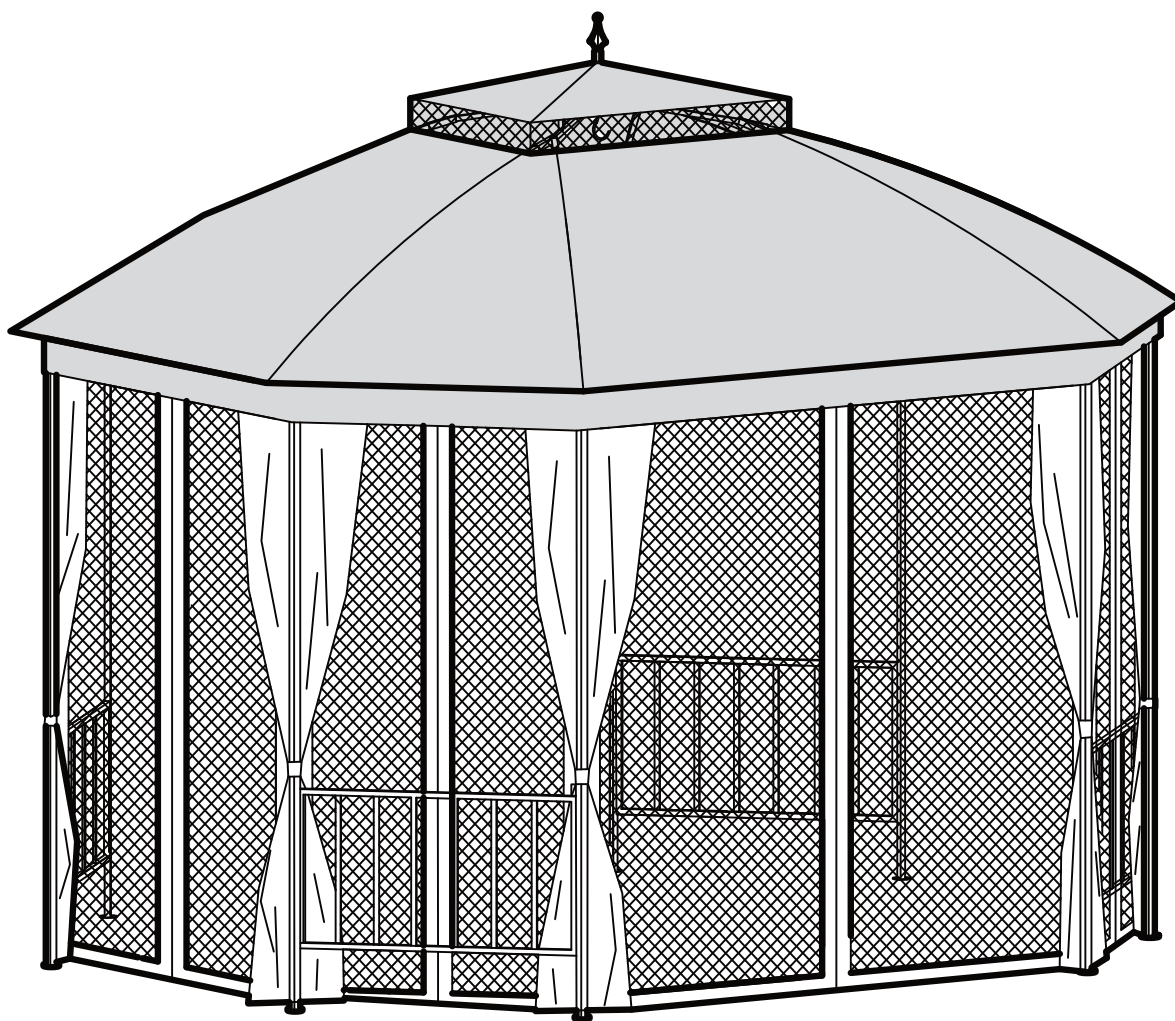

Assembly Instructions

Toll-free: 1-877-483-6759

IMPORTANT: Please read this manual carefully before beginning assembly of this product.
Keep this manual for future reference.

Table of Contents	3
Important Safety Instructions	3
Package Contents	4
Assembly	5
Cleaning and Maintenance	13
Specifications	13
Warranty	14



Warning! To reduce the risk of serious injury, read the following safety instructions before assembling and using the gazebo.

Caution! Always keep children under close supervision while they are playing in this product. Keep pets away while setting up the gazebo.

 






 

 
 
 


Caution! Check municipal by-laws prior to setting up the gazebo.






 

 

 

- This product is intended for domestic outdoor use i.e. decorative and sunshade purposes only.
- Always place and assemble the gazebo on flat horizontal ground.
- Consult with your local governing authority / local municipal codes regarding installation of temporary structures before assembly.
- Ensure there is enough clearance around the product. Before assembling the gazebo, make sure to leave a distance of not less than 6' (1.8 m) from any structures or obstructions, such as fences, garages, houses, overhanging branches, laundry lines, or electrical wires.
- **Anchor the gazebo to the ground with stakes for added safety. Stakes are provided to secure the gazebo to the ground. If you wish to secure the gazebo to a concrete and wood surfaces, use anchors suited for these surfaces (anchors not included).** Do not assemble the gazebo on sandy, muddy or loose soil, as stakes are not strong enough to anchor in these types of soil.
- If more than one gazebo is set up, keep a minimum distance of 10' (3 m) between the gazebos.
- Any assembly or maintenance of the gazebo must be carried out by adults only.
- Make sure there is sufficient manpower when assembling or moving the gazebo.
- Some parts may contain sharp edges. Wear protective gloves if necessary.
- Check all nuts and bolts periodically for tightness. If required, tighten them.
- Repairing and replacing parts should be done by a qualified technician.
- Always disassemble the gazebo before experiencing heavy wind conditions, as it is not designed to withstand harsh weather, including high wind, rain, and snow. In these conditions, it might tip over and could cause injury to bystanders.
- Always ensure that the canvas is taut to avoid water accumulation on the roof. If water accumulates on the roof, remove it immediately or disassemble the gazebo in order to avoid damages.
- Do not light any fires inside or near the gazebo.
- Do not panic if fire breaks out inside the gazebo. Leave by the nearest exit. Call the fire department. Do not return to the gazebo until the fire fighters allow you to do so.
- Do not hang any weights on the roof frame.
- Do not climb onto the roof of the gazebo. Doing so may cause the gazebo to fall down, thereby resulting in serious injury.
- If the gazebo will not be used for a long period of time (e.g. during winter time), disassemble and store it in a clean, dry environment.

IMPORTANT: RETAIN FOR FUTURE REFERENCE, AND READ CAREFULLY.

Made in China

Imported by
Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

A1	Small top connector - 1	
A2	Large top connector - 1	
B1	Finial - 1	
B2	Hook - 1	
C3	Small top slanting bar - 4	
C4	Slanting bar connector - 4	
D1	Top bar 1 - 4	
E2	Top bar 2 - 4	
E3	Top bar connector - 8	
F	Beam 1 - 4	
G	Beam 2 - 2	
H	Beam 3 - 2	
I	Post 1 - 4	
J	Post 2 - 4	

K	Fence - 4	
L	Small canopy - 1	
M	Large canopy - 1	
N	Mosquito netting - 1	
O	Screen - 1	
AA	M6 x 15 bolt - 32 + 2 spare	
BB	M6 washer - 48 + 2 spare	
CC	M6 x 35 bolt - 16 + 2 spare	
DD	Stake - 16	
W	M6 wrench - 1	
FF	Plastic ring - 120	



Caution!

- Proper placement of your gazebo is essential. Do not place the gazebo underneath electrical lines.
- Keep children under close supervision while they are playing around this product. This product contains small parts which can be swallowed by children.
- Keep fingers away from places where they can be pinched or trapped.
- Do not attempt to assemble the gazebo if any part is missing.



Let us help you!

 
DO NOT RETURN YOUR PRODUCT TO THE STORE. CALL US FIRST!
1-877-483-6759

If you have questions regarding your product, require warranty assistance, or have damaged or missing parts, please call our customer service toll-free helpline. Contact us for assistance, we're here to help.


IMPORTANT: Please read and understand this manual before any assembly. Before beginning assembly of the product, make sure all parts are present. Compare parts with packaging contents list.

Take all parts from the packaging box and position them on a clean floor. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step. If any part is missing, please call our toll-free number for assistance 1-877-483-6759.

Needed for assembly:



Hammer

 

Ladder

 


4 people

Note: When using nuts to assemble the product, always use a flat washer between the frame and the nut. This will protect the parts from wear and tear.



Step 1
Requires F, I, J, AA, BB, W

Attach the short beam (F) to one of the posts (I, J) using bolt (AA) and washer (BB). Tighten the bolts using the wrench (W).

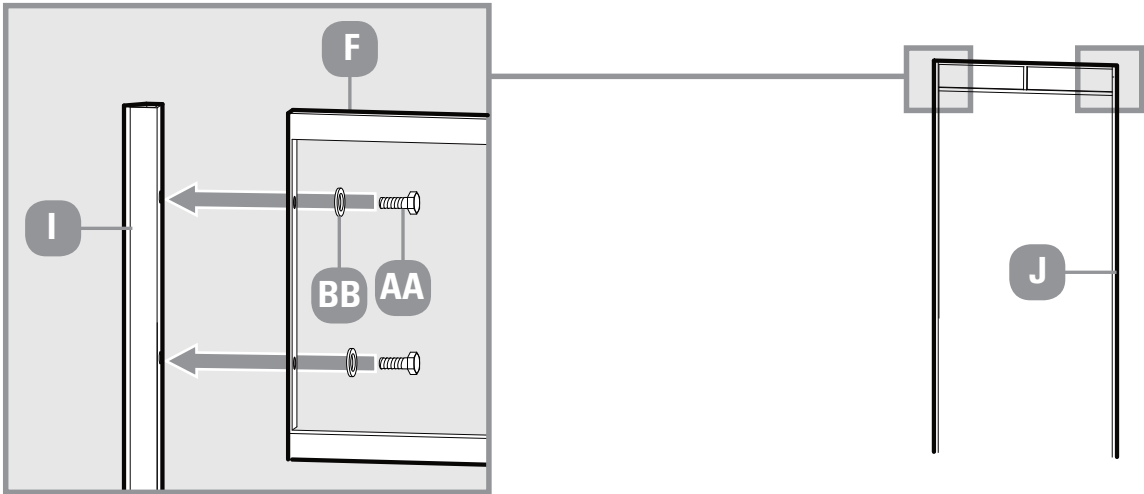


Step 2
Requires I, J, K, W, BB, CC

  Attach the fence (K) to post 1 (I) and then attach to post 2 (J) using bolt (CC) and washer (BB). Tighten the bolts using the wrench (W).

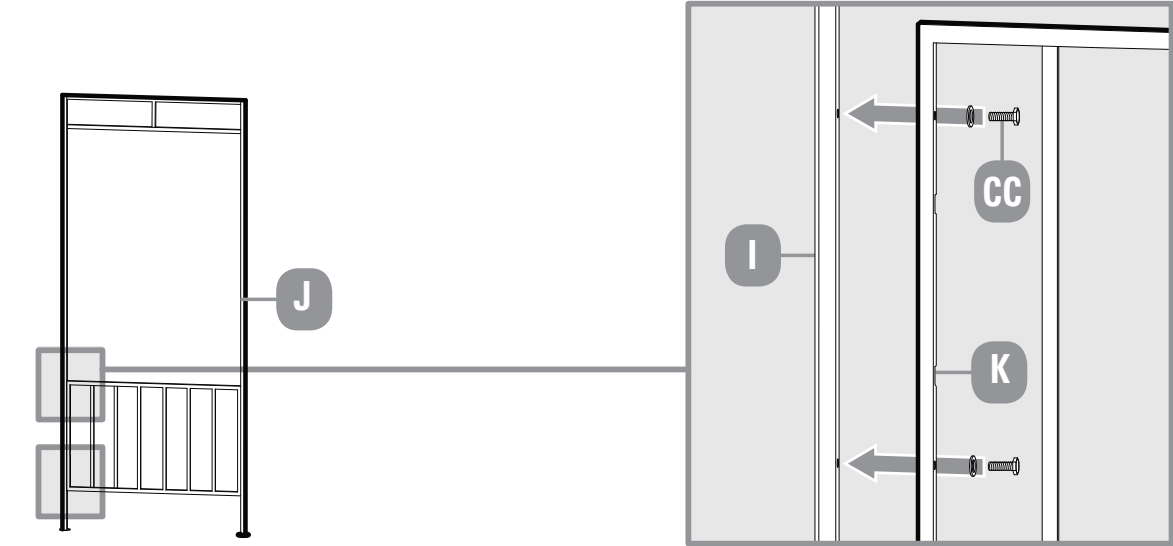


Step 3
Requires I, J, H, W, AA, BB

 Attach beam 3 (H) to post 1 (I) and to post 2 (J) using bolt (AA) and washer (BB). Tighten the bolts using the wrench (W).

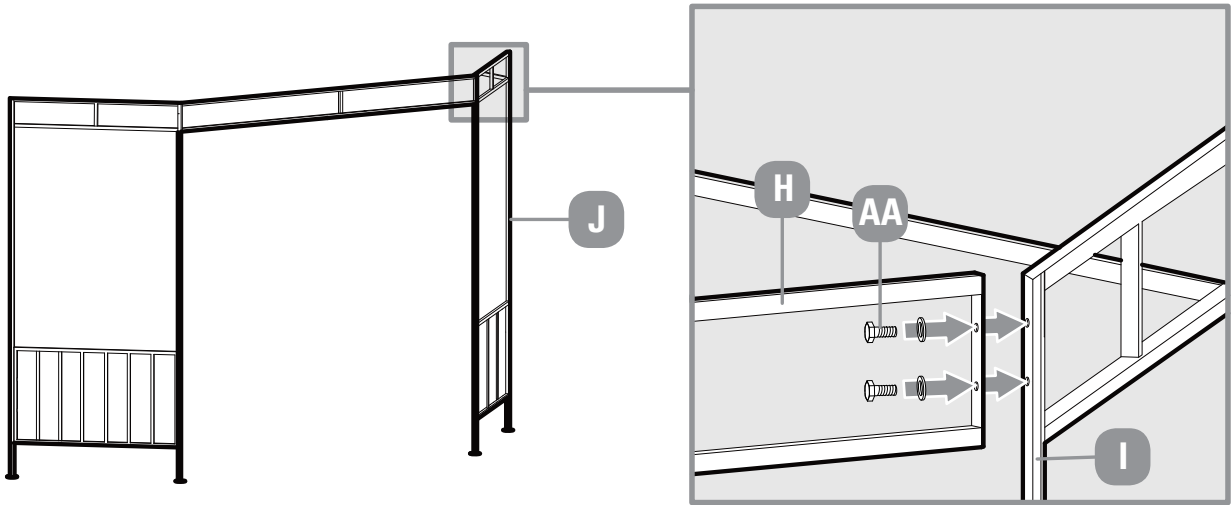


Step 4
Requires I, J, G, W, AA, BB

 Attach the short beam (G) to the post 1 (I) and to post 2 (J) using bolt (AA) and washer (BB). Tighten the bolts using the wrench (W).

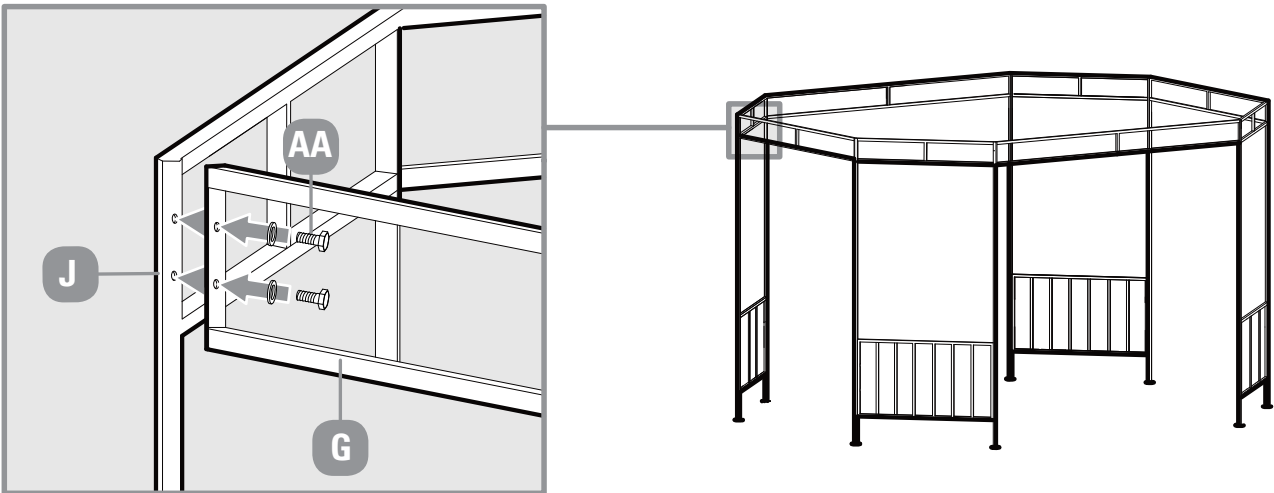


Step 5
Requires **C4, A2, B2**

 Insert one end of the slanting bar connector **(C4)** into the large top connector **(A2)**. Insert and screw the hook **(B2)** tightly into the large top connector.

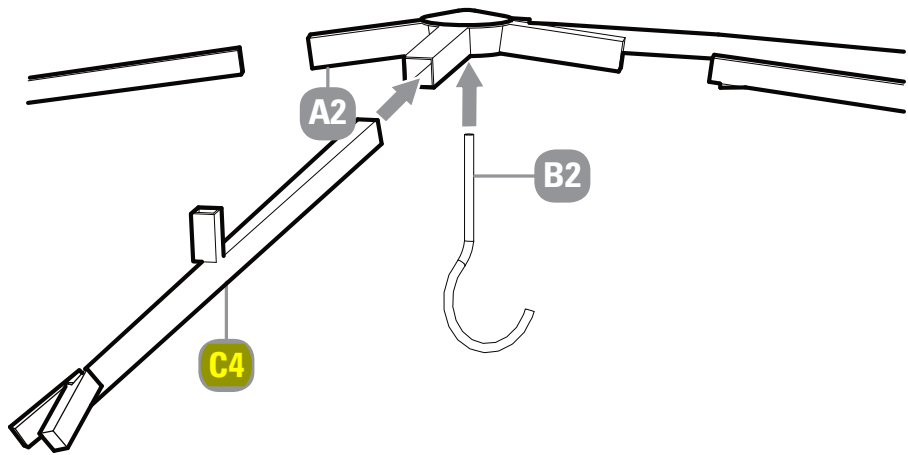


Step 6
Requires **C4, D1, E2**

 Connect the other ends of the slanting bar connector **(C4)** to the top bars **(D1,E2)**

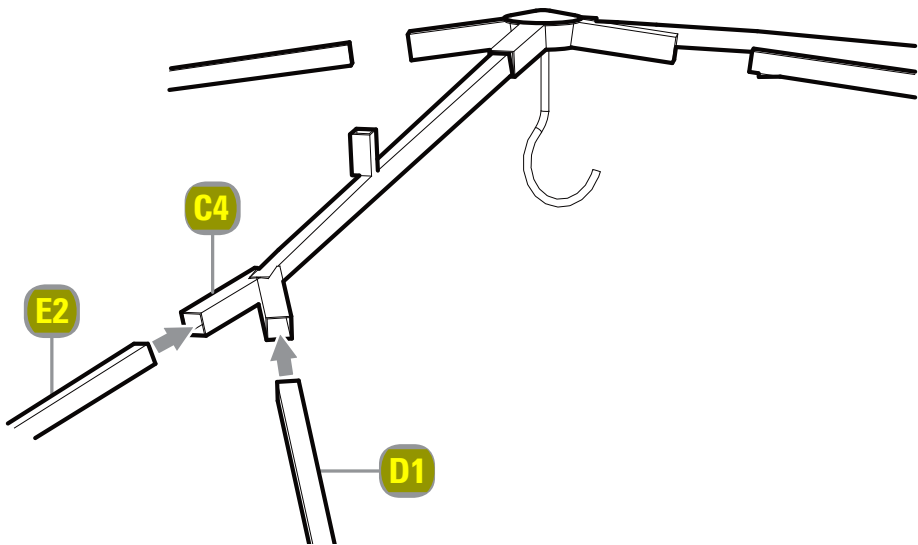


Step 7
Requires **D1, E2, E3**



 
Insert top bar 2 **(E2)** into top bar connector **(E3)**, and top bar 1 **(D1)** into top bar connector **(E3)**.

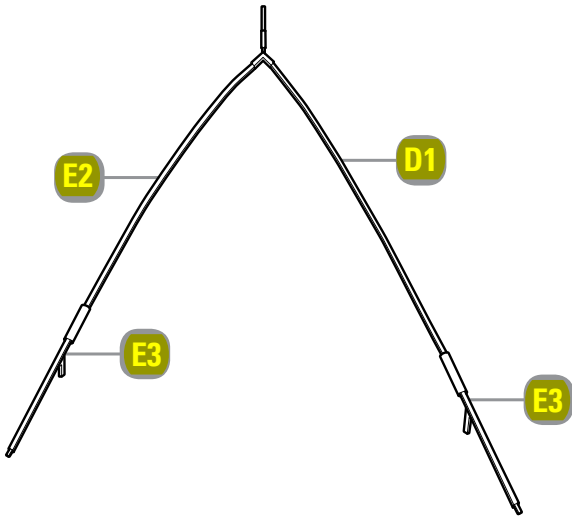

Step 8
Requires **I, J, M, E3**

    
Insert the other ends of the top bar connectors **(E3)** into the posts **(I, J)**, respectively. Then place the large canopy **(M)** on the top of the frame. Do not expand the large canopy at this step.

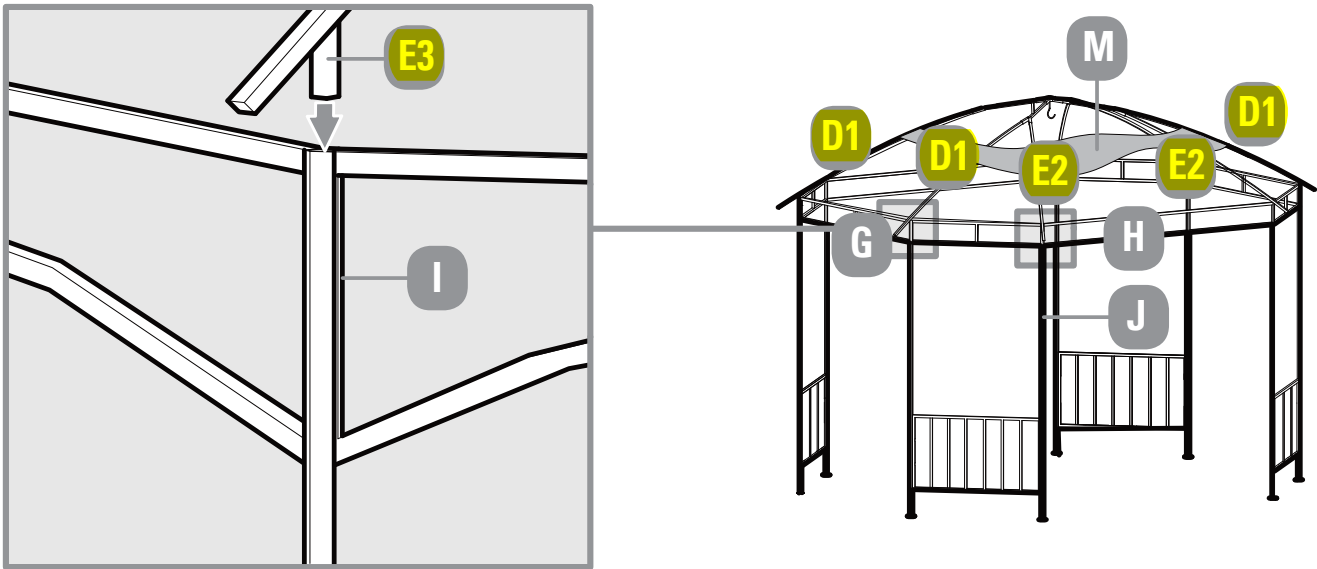

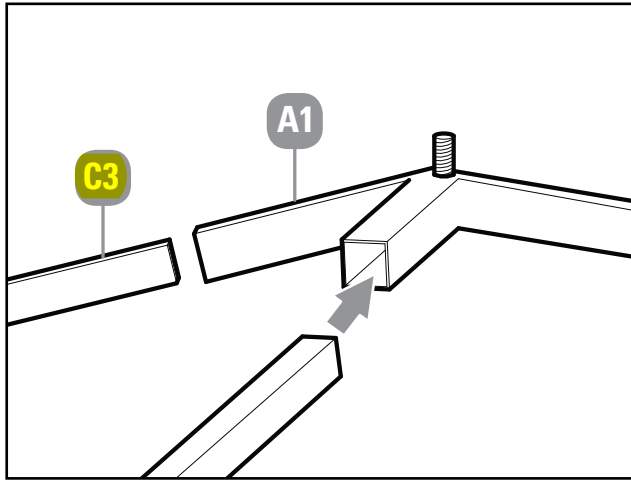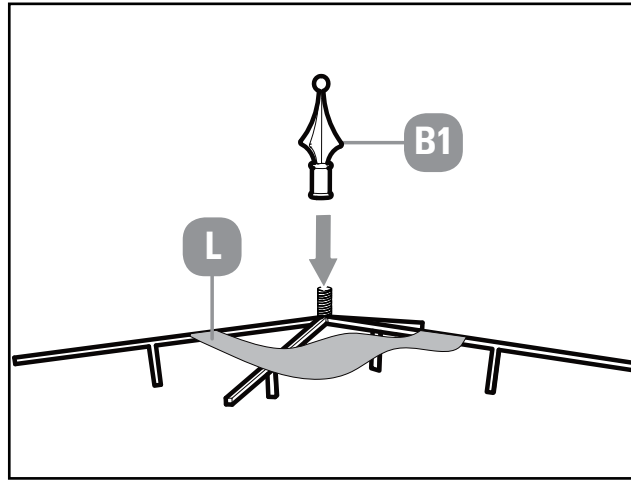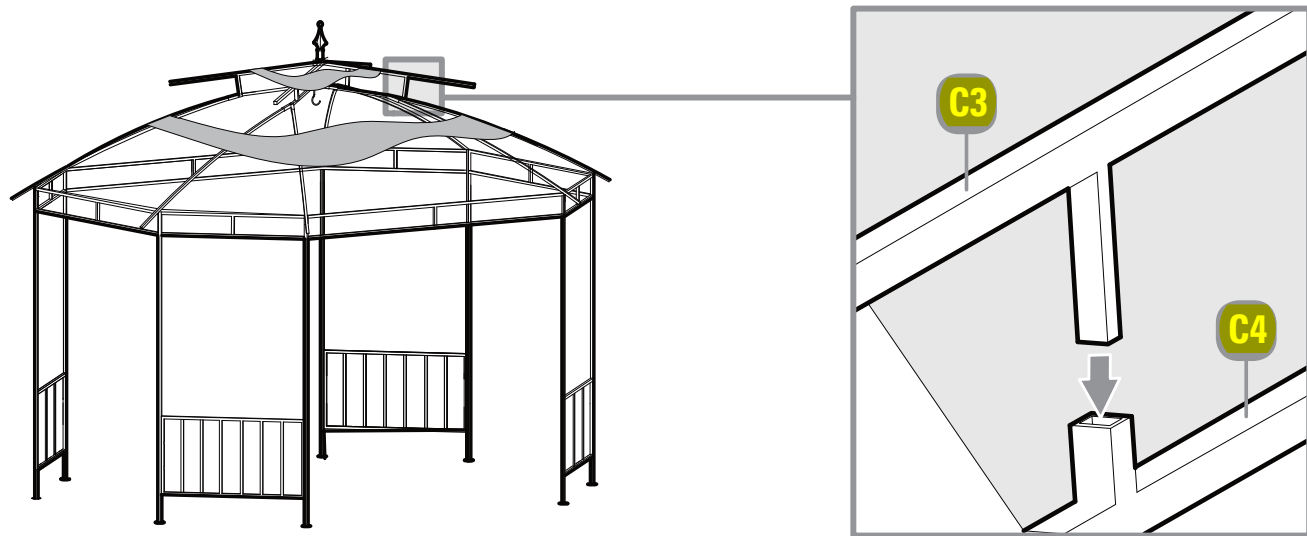Step 9Requires L, A1, B1, **C3****(9a)** Insert one end of the small top slanting bar **(C3)** into the small top connector (A1).**(9b)** Place the small canopy (L) on the frame. Screw the finial (B1) onto the tip of the small top connector.**Step 10**Requires **C3, C4**Insert the other end of the small top slanting bar **(C3)** into the slanting bar connector **(C4)**.**Step 11**



Requires L, M

 Fit the small canopy (L) onto the top frame and the large canopy (M) onto the lower frame.

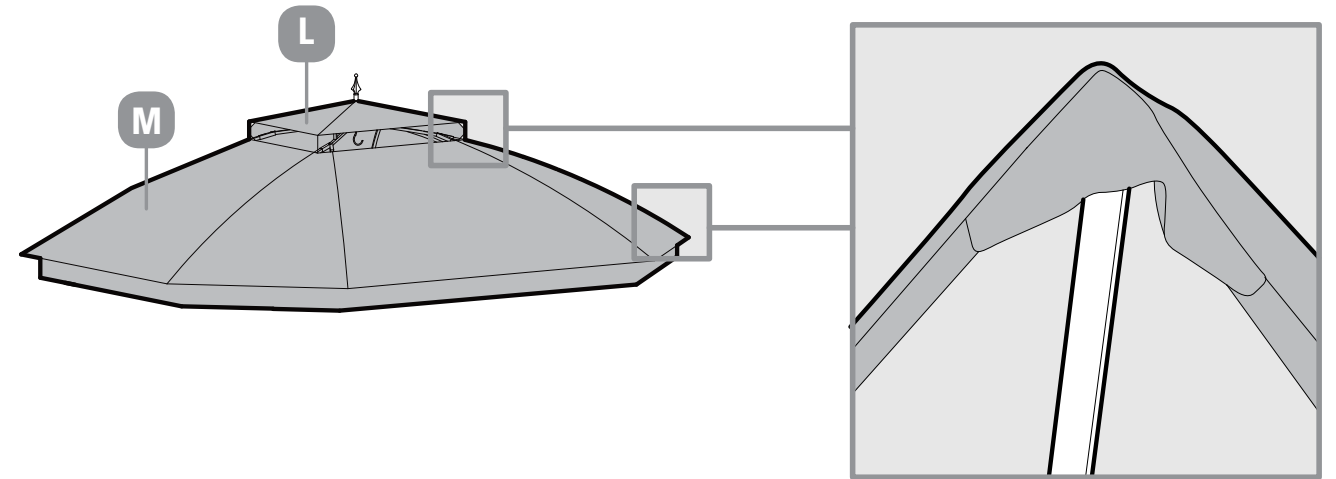**Step 12**


Requires DD

  If using on soil or grass, anchor the beam to the ground using stakes (DD). Repeat this step for every beam until all the beams are anchored.

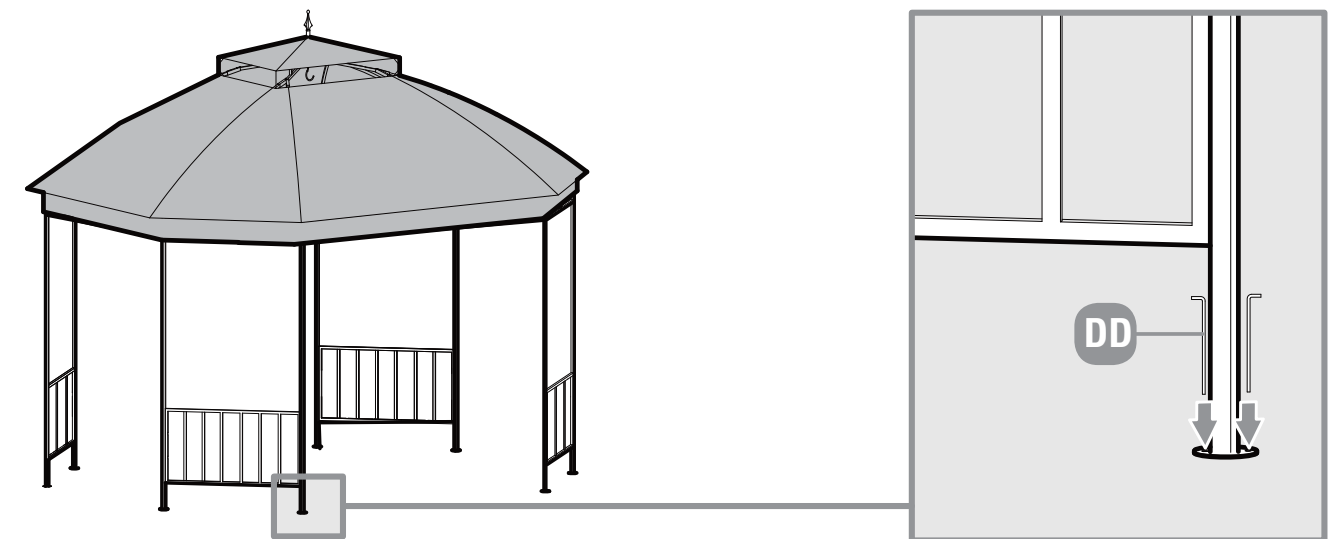


Step 13
Requires N, O, FF

 Hang the screen (O) on the lower tube of the short and long beams using plastic rings (FF). Hang the mosquito netting (N) on the upper tube of the beams using plastic rings.

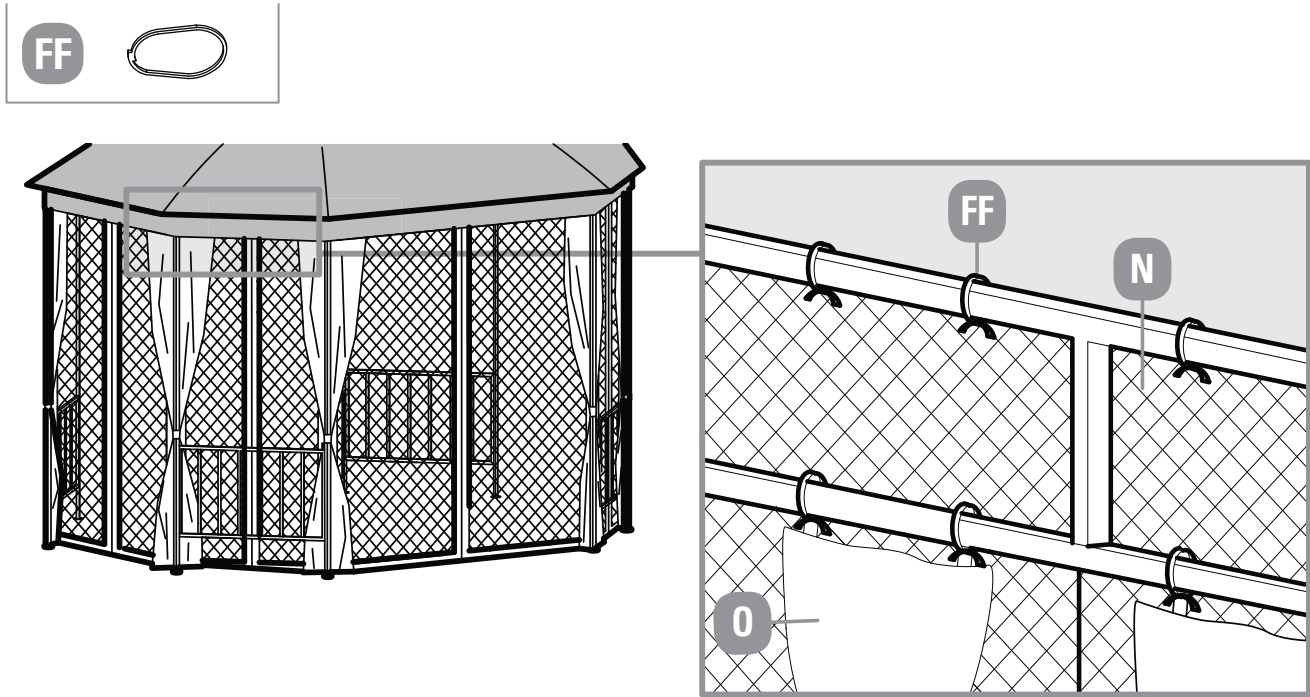

 Step 14
The gazebo is ready to use.

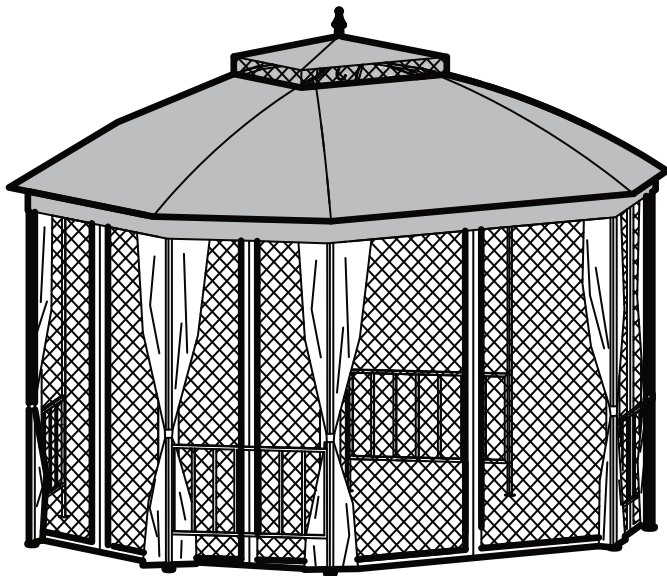

- Caution!**
- Check all nuts periodically for tightness and tighten them if required.
 - Disassemble the gazebo in the reverse order of the assembly steps. Always disassemble the gazebo completely. A partially disassembled gazebo is not stable enough to resist wind and bad weather, and therefore can be damaged and/or cause damage.

- To wash the fabric parts:
 - Spread the fabric and use a soft bristle brush to clean.
 - Do not use detergent.
 - Water should be cold to lukewarm, not more than 77°F (25°C).
 - Air dry only. Do not spin in washing machine or hand squeeze.
- Do not use bleach, acid, or other abrasive cleaners on the canopies or frame parts.
- Steel components of garden accessories and furniture are coated with rust-inhibiting paint. However, due to the nature of steel, surface oxidation (rusting) will occur if this protective coating is scratched. This is a natural process. To minimize this condition, it is recommended that care be taken when assembling and handling the product, in order to prevent the paint from being scratched. Surface rust can be removed easily by applying a little common cooking oil. If surface oxidation (rusting) occurs and no measures are taken to correct it, the oxidation may start dripping onto the assembly surface, which may cause rough stains that could be difficult to remove.

Dimensions (L x W x H)	11' 10" x 9' 10" x 9' 5"
	3.6 x 3 x 2.9 m
Weight	106 lb
	48 kg

This For Living™ product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.